



## View Firmware Version of Grizzl-E Smart

The easiest method to view the Firmware Version of the Grizzl-E Smart is to check the Connection Screen:

1. Plug in the Charger. Ensure indicator light is alternating Blue and Purple. Ensure unit is not connected to Wi-Fi.
2. Open the Wi-Fi settings on your smartphone or desktop.
3. Connect to the network **UC\_Smart\_Serial#**. Find the Charger Serial Number on the white label on the side of the Grizzl-E Smart.
4. Open the browser on your phone or desktop.
5. Enter the IP address **192.168.4.1** into the browser search bar. A webpage will load.
6. Select the **Enter Credentials** button.
7. Check the Connection Screen to verify if you have Firmware Version 5.43 or 5.53:

### 5.43

Smart Grizzle network configuration

In o  
con  
Ple:  
Pas  
You  
Or I

SSID  
Enter SSID

Password  
Enter Password

Portal URL  
acharger.ca

Enter credentials

Cancel

- Portal URL is manually Entered

### 5.53

Smart Grizzle network configuration

In o  
con  
Ple:  
Pas  
You  
Or I

SSID  
Autochargers

Password  
.....

Show Password

Select service portal provider  
United Chargers Inc

Public use

Enter credentials

Cancel

- Drop down list to Select Portal Provider
- Option to select Show Password and enable Public Use.

Note: If you have Firmware Version 5.43, follow the remainder of the instructions to [Connect to ChargeLab](#). If you have version 5.53 please fill out the [Technical Support Form](#) on grizzl-e.com