
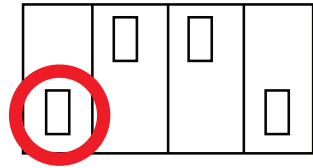


8. Disconnect From Wi-Fi

8.1 Reset Wi-Fi

If the Grizzl-E Smart Charger has lost connection and is unable to re-establish the connection try resetting the board using the following procedure:

1. Unplug the Charging Station.
2. Remove the front cover by removing the 4 screws at each corner of the charging station.
3. With the front cover placed to the side, locate the DIP switch on the charging station circuit board. The DIP switch is a 4-position switch on the main circuit board, located directly to the left of the LED.
4. Move the DIP Switch #1 to the down position. This applies for all amperage settings.
5. Plug the Charger back in. Wait 30 seconds. Ensure the indicator light is Blue/Purple alternating with 1 second frequency.
6. Unplug the Charger again.

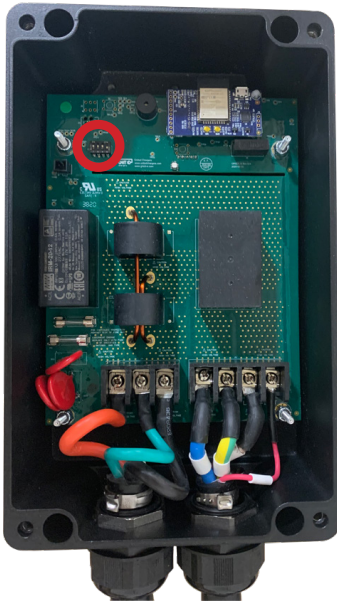

7. Set the DIP switch back to the original position.
8. Plug the charger in. Charger will display Blue/Purple alternating indicator light.
9. Follow the instructions to Check the Firmware Version.
10. Replace the enclosure lid by tightening the 4 screws at each corner.